

**SERVICE INFORMATION**


**Number:** 101-1428

**Year:** 1993

**Month:** SEPTEMBER

**Market:** ALL

**Cushioning material when raising Saab 900 M94-**

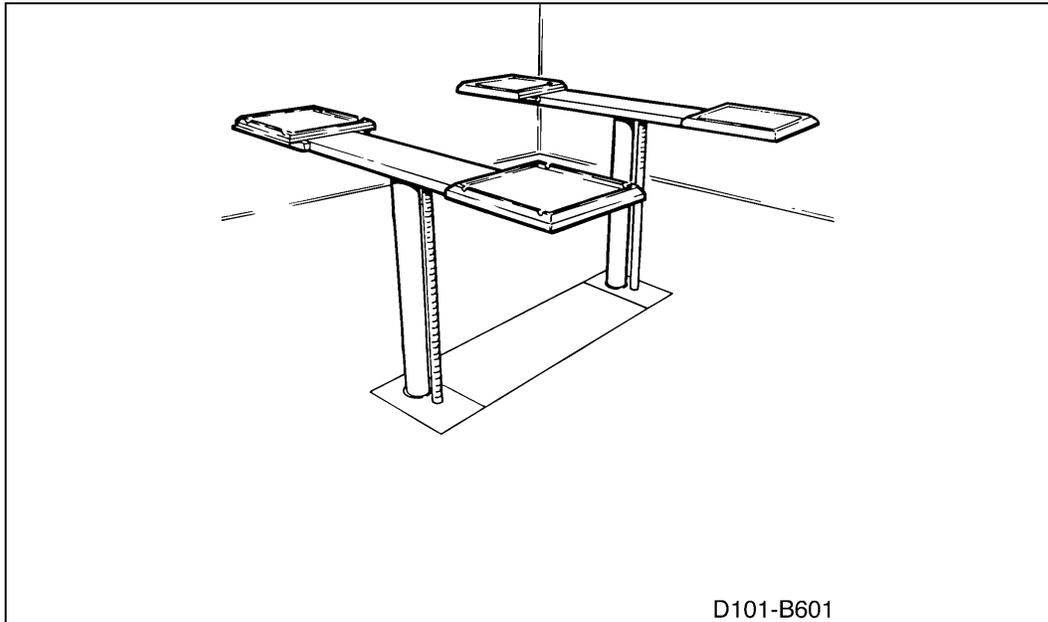

**Background**

When lifting the M94 Saab 900 by means of an AUTOP type car lift, the fuel filter, fuel tank and exhaust pipe can be damaged. To prevent this, rubber pads have been developed which should be placed between the supporting plates and the car sills.

Wooden blocks or the like (which can split) must not be used.

The car is slightly front-heavy, which should be taken into account when lifting it.

**Materials**

(45) 30 19 130 Lift pads (4 required)

Expected to be in stock by week 40.