

## TECHNICAL NEWS


**Number:** 98-12-843

**Year:** 1998

**Month:** DECEMBER

**Market:** ALL

### Door mirror casing comes loose

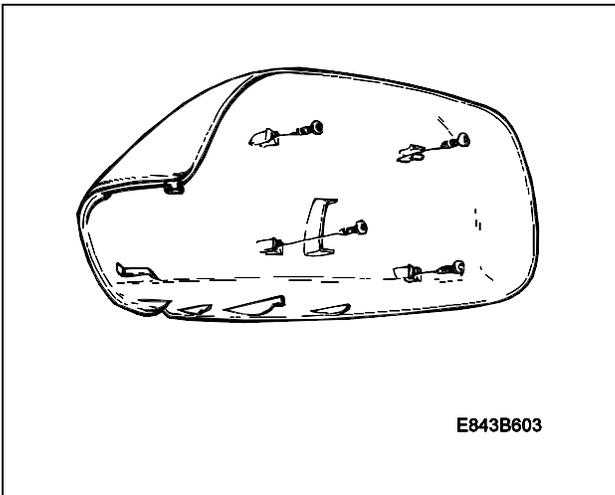

#### Cars affected

Saab 9-5 up to and including VIN W3077258 (M98) and X3001490 (M99) respectively

#### Background

Door mirror casing comes loose.

#### Parts required

79 75 535 Screw

#### Procedure

- 1 Remove the mirror glass.
- 2 Make sure the glass was not damaged during removal.
- 3 Open the three clips just enough to fit the screws (part no. 79 75 535), which will reinforce the casing mounting. See illustration.
- 4 Make sure there are no depressions in the mirror casing. If this is the case, loosen the screws 1-2 turns.
- 5 Make sure the rubber bellows for the mirror motor are in place.
- 6 Fit the glass with the motor in its centre position. The glass must not be loose. Make sure the glass is located correctly.
- 7 Check that the glass can be adjusted to all end positions.