

## SERVICE INSTRUCTION


**Number:** 391-1964

**Year:** 1998

**Month:** APRIL

**Market:** US, CA

### Handsfree installation and glass-mounted mobile telephone antenna

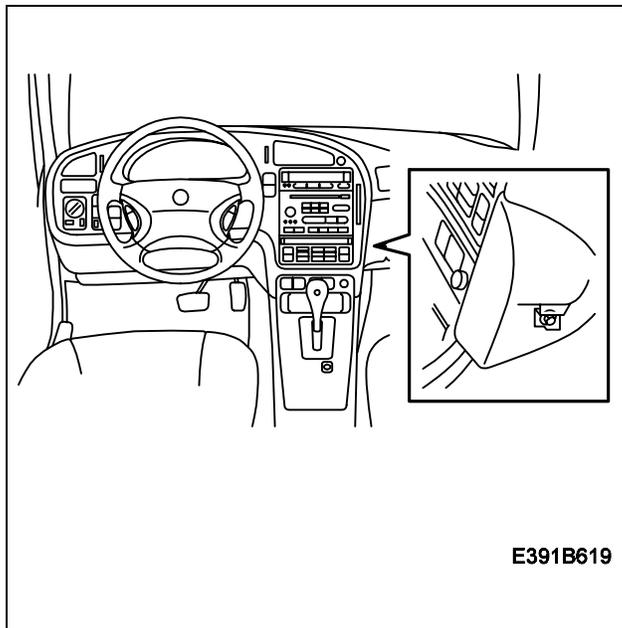

#### Cars affected

Saab 9-5 M98-

#### Background

Saab 9-5 is pre-wired for installing a mobile telephone. There are two different levels of pre-wiring: Telephone connection (Tel 0) and Handsfree connection (Tel 1).

**The telephone connection (Tel 0)** is ready for installing a mobile telephone via a 10-pin connector in the dashboard, to which the telephone can be connected. There is no pre-wired coaxial cable for the mobile antenna.

Functions obtained with a pre-wired telephone connection are disconnection of the normal audio system sound during a telephone call (provide a Saab Audio System is used), power supply and battery recharging for the mobile telephone, and the TELEPHONE message displayed on SID during the telephone call.

**The handsfree connection (Tel 1)** is ready for installing a handsfree system for the mobile telephone via a 10-pin connector in the dashboard. A pre-wired handsfree installation includes an integral microphone in the front roof console for improved acoustics, use of the existing loudspeaker system (provided that Saab Audio System is fitted) and pre-wired coaxial cable for the mobile antenna.

Functions obtained with a pre-wired handsfree connection are disconnection of the normal audio system sound during a telephone call, power supply and battery charging for the telephone. The volume of the telephone call can be adjusted with the volume control on the audio system and the TELEPHONE message is displayed on SID during the telephone call.

The glass-mounted antenna used by Saab is adapted to the GSM 900/1800 and NMT 900 systems.

As the rear window contains the FM and AM antennas, it is important that the antenna is fitted according to the directions recommended by Saab in this SI and in the antenna installation instructions.

It is possible that an analogue mobile telephone system will cause interference on the FM radio reception.

This SI contains detailed directions for connecting the following telephones and glass-mounted antennas.

- Nokia 2110 on page 4.
- Nokia 1610 on page 6.
- Motorola d 460 on page 8.
- Motorola Star Tac on page 10.
- Ericsson GH 600/700 range on page 12.
- Glass-mounted GSM 900/1800 antenna on page 14.

For other models of telephone, refer to the wiring diagrams for the telephone and the handsfree kit.

**Parts required**

For a more detailed list of parts refer to the respective telephone installation in this SI.

A general installation is described on the next page.

A Saab 9-5, Tel 1

B Adapter cable 400 108 130

C Handsfree kit (manufacturer's original kit)

1 Holder

2 Loudspeaker

3 DHFA

4 Wiring

5 Telephone cable

6 Microphone

7 Fuses

D Parts to be purchased from external sources

1 Antenna cable adapter

2 Microphone jack plug


3 Loudspeaker jack plug

4 (Mute cable)

E Parts not used from the handsfree kit


1 Microphone

2 Loudspeaker

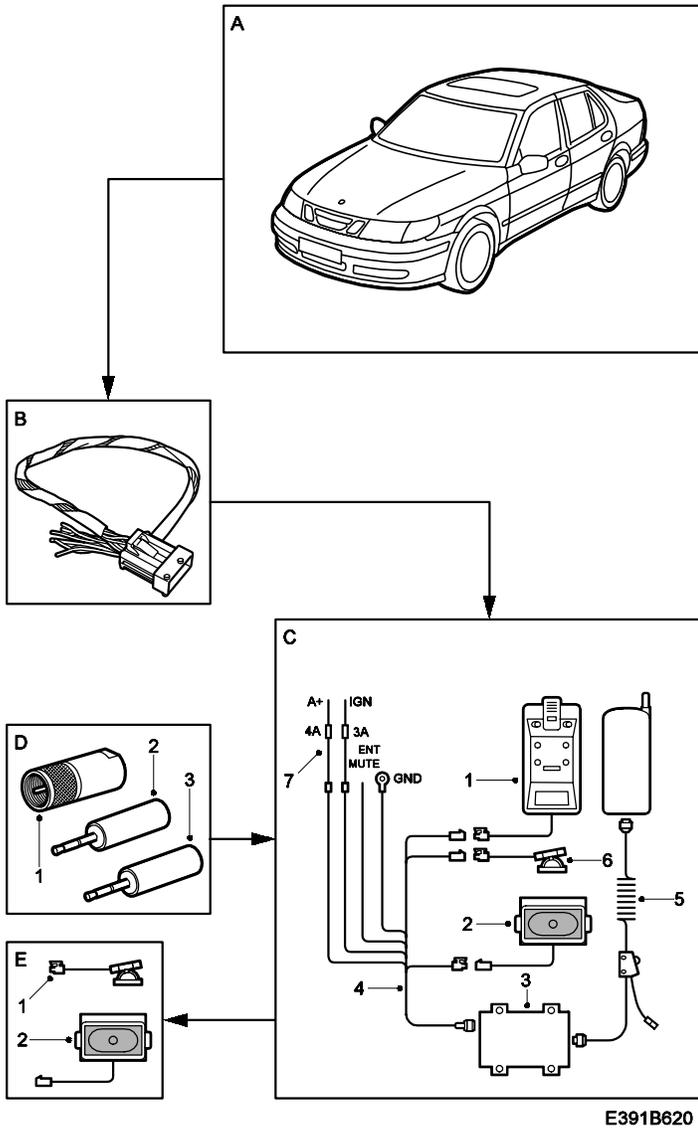

**Procedure**  
**Installation of NOKIA 2110**

**Parts required**

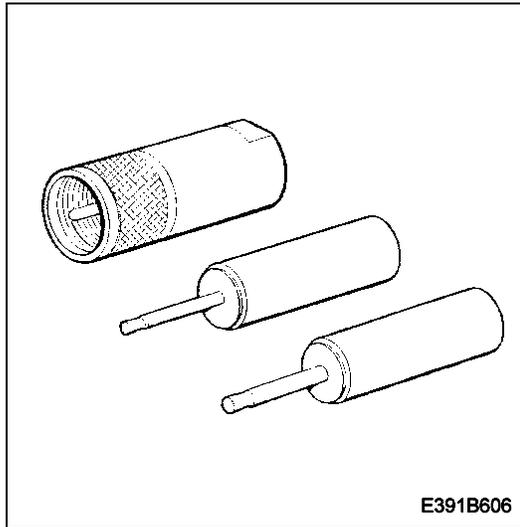


- 400 108 130 Adapter cable
- 49 42 017 Installation instructions for the adapter cable (included in kit 400 108 130)
- Antenna cable adapter (purchased separately)
- NOKIA 2110 original handsfree kit (purchased separately)
- 3.5 mm jack plug (mono) for loudspeaker (purchased separately)
- 2.5 mm jack plug (mono) for microphone (purchased separately)
- Shrink tube  $\varnothing$  3 mm, approx. 150 mm
- 48 08 101 Installation instructions for the 9-5 telephone console (included in kit 400 106 415/423)

**NOTE**

Mark the adapter cable with the relevant pin numbers before commencing work.


- 1 Follow installation instructions 49 42 017 up to and including step 6.

2 New step 7:

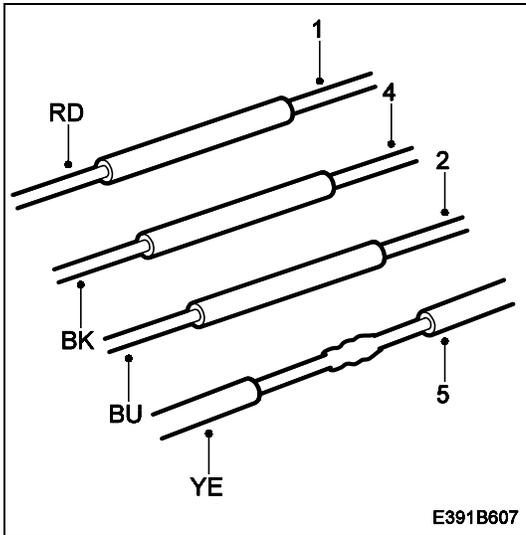

- a Make sure a lead **is not** connected to the adapter cable connector, pos. 6.  
If there is a lead connected, pull out the pin for the black lead in pos. 8 and replace it with the pin for the blue/white lead from pos. 6 in the adapter cable connector.
- b Place a piece of shrink-tubing over the red lead on the adapter cable and solder together the red lead from the telephone's handsfree kit with the red lead in pos. 1 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
- c Place a piece of shrink-tubing over the black lead on the adapter cable and solder together the black lead from the telephone's handsfree kit with the black lead in pos. 4 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
- d Place a piece of shrink-tubing over the blue/red lead on the adapter cable and solder together the blue lead from the telephone's handsfree kit with the blue/red lead in pos. 2 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
- e Place a piece of shrink-tubing over the yellow lead on the adapter cable and solder together the yellow lead from the telephone's handsfree kit with the yellow lead in pos. 5 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.

f Microphone:

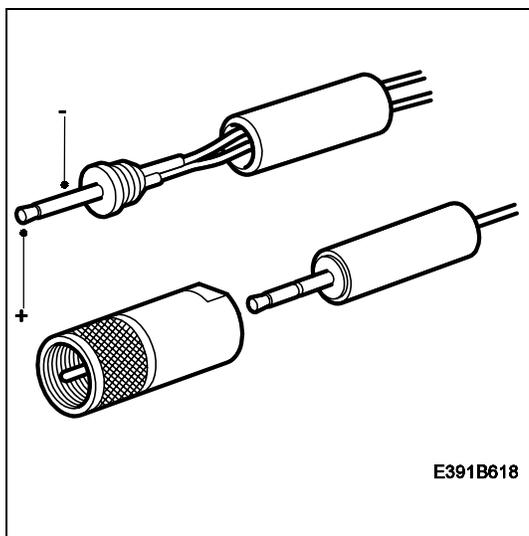

Use an ohmmeter to determine which of the terminals is the (+) and (-) of the jack plug.  
Solder the brown/grey lead in pos. 10 on the adapter cable to the (+) terminal on the jack plug.  
Solder the green lead in pos. 3 on the adapter cable to the (-) terminal on the jack plug.

g Loudspeaker:

Use an ohmmeter to determine which of the terminals is the (+) and (-) of the jack plug.  
Solder the grey/white lead in pos. 7 on the adapter cable to the (+) terminal on the jack plug.  
Solder the blue/white lead in pos. 8 on the adapter cable to the (-) terminal on the jack plug.

h Connect the microphone and loudspeaker jack plugs to the telephone's handsfree module.

i Connect the antenna cable with the adapter to the antenna cable on the telephone's handsfree module.

j Make sure the microphone connection in the 10-pin connector has a screened lead (pos. 10 and pos. 3) in the car's pre-wired harness.


**If there is no screened lead**, continue with SI 391-1872 and then steps 8 and 9 in installation instructions 49 42 017.

**If there is a screened lead**, continue with steps 8 and 9 in installation instructions 49 42 017.

3 Then fit the telephone console as described in installation instructions 48 08 101.

**Installation of NOKIA 1610**

### Parts required

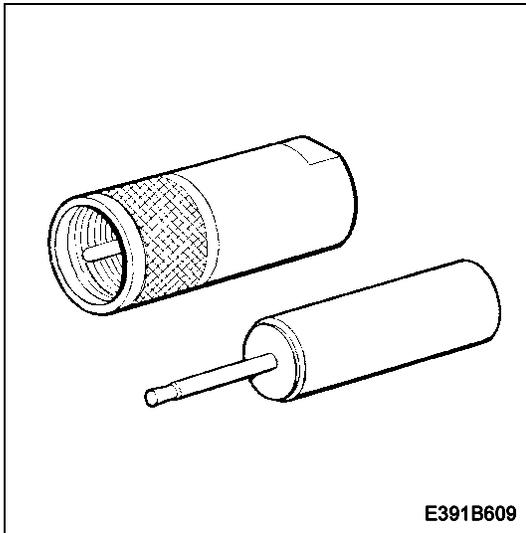

- 400 108 130 Adapter cable
- 49 42 017 Installation instructions for the adapter cable (included in kit 400 108 130)
- Antenna cable adapter (purchased separately)
- NOKIA 1610 original handsfree kit (purchased separately)
- 2.5 mm jack plug (mono) for microphone (purchased separately)
- Shrink tube  $\varnothing$  3 mm, approx. 70 mm
- 48 08 101 Installation instructions for the 9-5 telephone console (included in kit 400 106 415/423)


The car's loudspeaker system is not used.

### NOTE

Mark the adapter cable with the relevant pin numbers before commencing work.


- 1 Follow installation instructions 49 42 017 up to and including step 6.

2 New step 7:

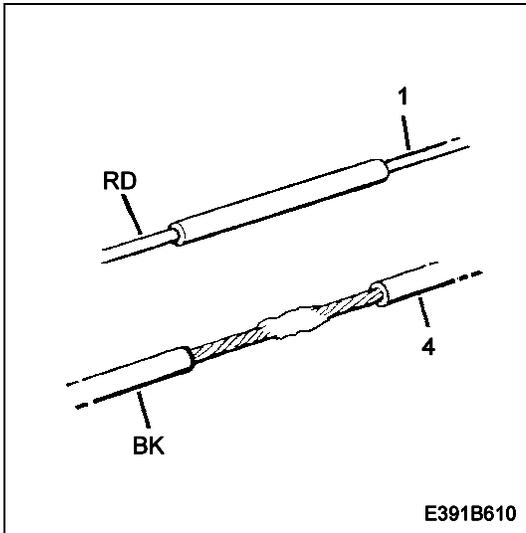

- a Make sure a lead **is not** connected to the adapter cable connector, pos. 6.  
If there is a lead connected, pull out the pin for the black lead in pos. 8 and replace it with the pin for the blue/white lead from pos. 6 in the adapter cable connector.
- b Place a piece of shrink-tubing over the red lead on the adapter cable and solder together the red lead from the telephone's handsfree kit with the red lead in pos. 1 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
- c Place a piece of shrink-tubing over the black lead on the adapter cable and solder together the black lead from the telephone's handsfree kit with the black lead in pos. 4 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.

d Microphone:

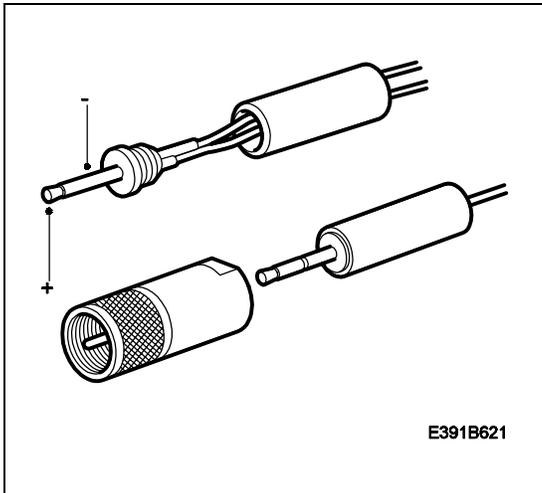


Use an ohmmeter to determine which of the terminals is the (+) and (-) of the jack plug.  
Solder the brown/grey lead in pos. 10 on the adapter cable to the (+) terminal on the jack plug.  
Solder the green lead in pos. 3 on the adapter cable to the (-) terminal on the jack plug.

- e Connect the microphone jack plug to the telephone's handsfree module.
  - f Connect the antenna cable with the adapter to the antenna cable on the telephone's handsfree kit.
  - g Make sure the microphone connection in the 10-pin connector has a screened lead (pos. 10 and pos. 3) in the car's pre-wired harness.  
**If there is no screened lead**, continue with SI 391-1872 and then steps 8 and 9 in installation instructions 49 42 017.  
**If there is a screened lead**, continue with steps 8 and 9 in installation instructions 49 42 017.
- 3 Then fit the telephone console as described in installation instructions 48 08 101.

**Installation of Motorola d 460**

### Parts required

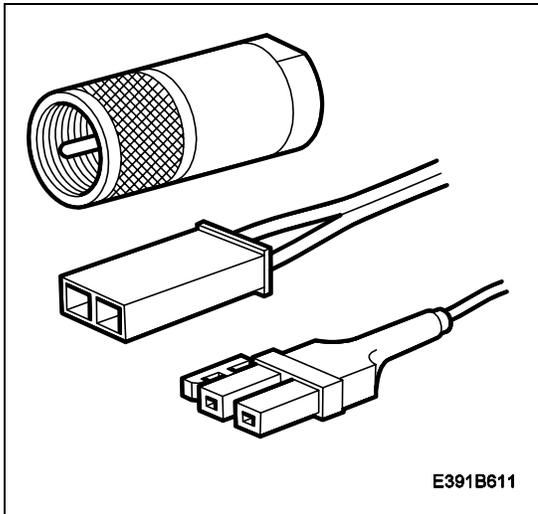

- 400 108 130 Adapter cable
- 49 42 017 Installation instructions for the adapter cable (included in kit 400 108 130)
- Antenna cable adapter (purchased separately)
- Motorola d 460 original handsfree kit (purchased separately)
- Shrink tube  $\varnothing$  3 mm, approx. 220 mm
- 48 08 101 Installation instructions for the 9-5 telephone console (included in kit 400 106 415/423)


Use the connectors included with the handsfree kit to install the microphone and loudspeaker.

### NOTE

Mark the adapter cable with the relevant pin numbers before commencing work.


- 1 Follow installation instructions 49 42 017 up to and including step 6.

2 New step 7:

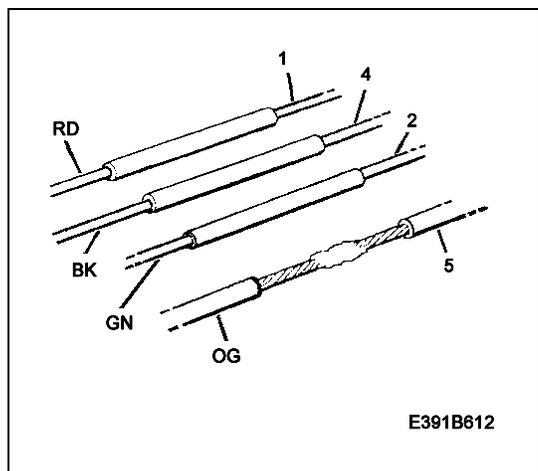

- a Make sure a lead **is not** connected to the adapter cable connector, pos. 6.  
If there is a lead connected, pull out the pin for the black lead in pos. 8 and replace it with the pin for the blue/white lead from pos. 6 in the adapter cable connector.
- b Place a piece of shrink-tubing over the red lead on the adapter cable and solder together the red lead from the telephone's handsfree kit with the red lead in pos. 1 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
- c Place a piece of shrink-tubing over the black lead on the adapter cable and solder together the black lead from the telephone's handsfree kit with the black lead in pos. 4 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
- d Place a piece of shrink-tubing over the blue/red lead on the adapter cable and solder together the green lead from the telephone's handsfree kit with the blue/red lead in pos. 2 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
- e Place a piece of shrink-tubing over the yellow lead on the adapter cable and solder together the orange lead from the telephone's handsfree kit with the yellow lead in pos. 5 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.

f Microphone:

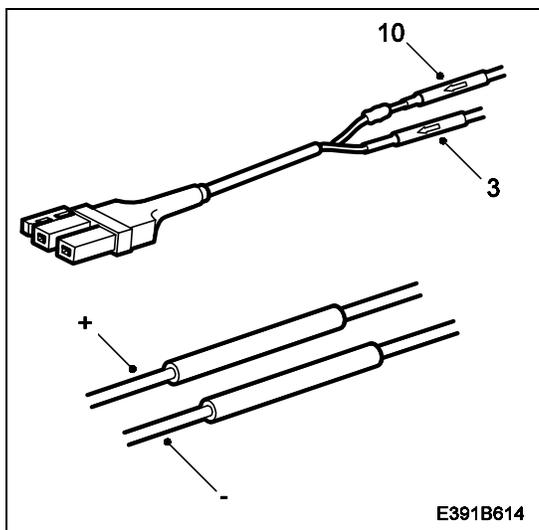

**IMPORTANT**

Be careful with the heat from the soldering iron when soldering the microphone cable. The plastic melts easily.

Cut off the connector for the microphone in the handsfree kit. Place a piece of shrink-tubing over the green lead in pos. 3 on the adapter cable and solder the screen of the microphone cable to the green lead in pos. 3 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it carefully.

Place a piece of shrink-tubing over the brown/grey lead in pos. 10 on the adapter cable and solder the conductor in the microphone cable to the brown/grey lead in pos. 10 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it carefully.

g Loudspeaker:

**NOTE**

Before cutting off the connector for the loudspeaker in the handsfree kit: Open the loudspeaker and mark up the leads on the connector with (+) and (-).

Solder the grey/white lead in pos. 7 on the adapter cable to the (+) terminal on the connector.

Solder the blue/white lead in pos. 8 on the adapter cable to the (-) terminal on the connector.

h Connect the microphone and loudspeaker connectors to the telephone's handsfree module.

i Connect the antenna cable with the adapter to the antenna cable on the telephone's handsfree kit.

j Make sure the microphone connection in the 10-pin connector has a screened lead (pos. 10 and pos. 3) in the car's pre-wired harness.

If not, continue with SI 391-1872 and then step 8 in installation instructions 49 42 017.

If there is a screened cable, make sure the telephone uses a high level on the microphone.

**If the telephone uses a high level**, remove the roof console and unplug the microphone connector. Pull out the pin in pos. 2 and move the lead and pin to pos. 1. Plug in the microphone connector and fit the roof console.

**If the telephone uses a low level**, continue with steps 8 and 9 in installation instructions 49 42 017.

3 Then fit the telephone console as described in installation instructions 48 08 101.

**Installation of Motorola Star Tac**

#### Parts required

- 400 108 130 Adapter cable
- 49 42 017 Installation instructions for the adapter cable (included in kit 400 108 130)
- Antenna cable adapter (purchased separately)
- Motorola Star Tac original handsfree kit (purchased separately)
- 3.5 mm jack plug (mono) for loudspeaker (purchased separately)
- 2.5 mm jack plug (mono) for microphone (purchased separately)
- Shrink tube  $\varnothing$  3 mm, approx. 150 mm
- 48 08 101 Installation instructions for the 9-5 telephone console (included in kit 400 106 415/423)

#### NOTE

Mark the adapter cable with the relevant pin numbers before commencing work.

- 1 Follow installation instructions 49 42 017 up to and including step 6.
- 2 New step 7:
  - a Make sure a lead **is not** connected to the adapter cable connector, pos. 6.  
If there is a lead connected, pull out the pin for the black lead in pos. 8 and replace it with the pin for the blue/white lead from pos. 6 in the adapter cable connector.
  - b Place a piece of shrink-tubing over the red lead on the adapter cable and solder together the red lead from the telephone's handsfree kit with the red lead in pos. 1 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
  - c Place a piece of shrink-tubing over the black lead on the adapter cable and solder together the black lead from the telephone's handsfree kit with the black lead in pos. 4 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
  - d Place a piece of shrink-tubing over the blue/red lead on the adapter cable and solder together the green lead from the telephone's handsfree kit with the blue/red lead in pos. 2 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
  - e Place a piece of shrink-tubing over the yellow lead on the adapter cable and solder together the orange lead from the telephone's handsfree kit with the yellow lead in pos. 5 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
  - f Microphone:  
Use an ohmmeter to determine which of the terminals is the (+) and (-) of the jack plug.  
Solder the brown/grey lead in pos. 10 on the adapter cable to the (+) terminal on the jack plug.  
Solder the green lead in pos. 3 on the adapter cable to the (-) terminal on the jack plug.
  - g Loudspeaker:  
Use an ohmmeter to determine which of the terminals is the (+) and (-) of the jack plug.  
Solder the grey/white lead in pos. 7 on the adapter cable to the (+) terminal on the jack plug.  
Solder the blue/white lead in pos. 8 on the adapter cable to the (-) terminal on the jack plug.
  - h Connect the microphone and loudspeaker jack plugs to the telephone's handsfree module.
  - i Connect the antenna cable with the adapter to the antenna cable on the telephone's handsfree kit.

Make sure the microphone connection in the 10-pin connector has a screened lead (pos. 10 and pos. 3) in the car's pre-wired harness.

If not, continue with SI 391-1872 and then step 8 in installation instructions 49 42 017.

If there is a screened cable, make sure the telephone uses a high level on the microphone.


**If the telephone uses a high level** , remove the roof console and unplug the microphone connector. Pull out the pin in pos. 2 and move the lead and pin to pos. 1. Plug in the microphone connector and fit the roof console.

**If the telephone uses a low level** , continue with steps 8 and 9 in installation instructions 49 42 017.

3 Then fit the telephone console as described in installation instructions 48 08 101.

### Installation of Ericsson GH 600/700 range

#### Parts required

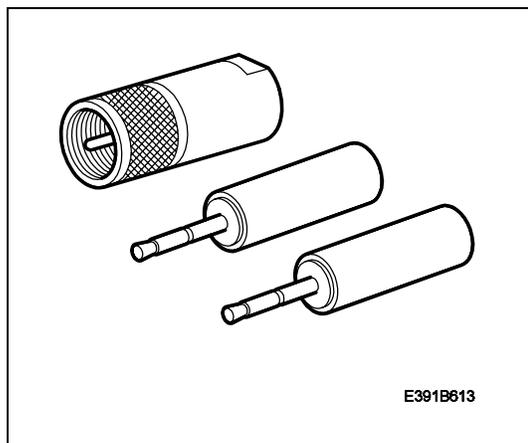


- 400 108 130 Adapter cable
- 49 42 017 Installation instructions for the adapter cable (included in kit 400 108 130)
- Antenna cable adapter (purchased separately)
- Ericsson GH 600/700 range original handsfree kit (purchased separately)
- 3.5 mm jack plug (mono) for loudspeaker (purchased separately)
- 3.5 jack plug (stereo) for the microphone (purchased separately)
- Mute cable KRY 11093-02 (Ericsson part no., purchased separately)
- Antenna cable adapter (purchased separately)
- Shrink tube  $\varnothing$  3 mm, approx. 90 mm
- 48 08 101 Installation instructions for the 9-5 telephone console (included in kit 400 106 415/423)

#### NOTE

Mark the adapter cable with the relevant pin numbers before commencing work.


1 Follow installation instructions 49 42 017 up to and including step 6.

2 New step 7:

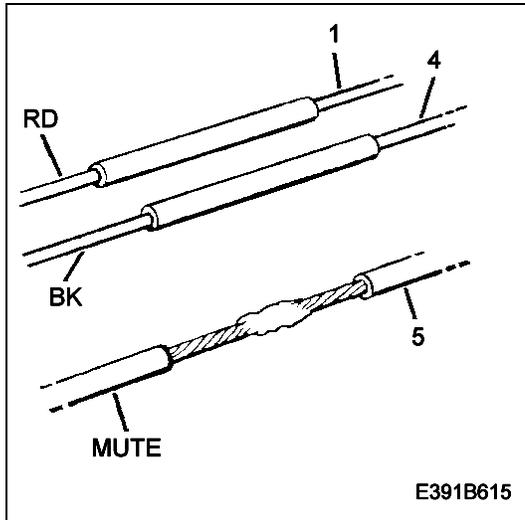

- a Make sure a lead **is not** connected to the adapter cable connector, pos. 6.  
If there is a lead connected, pull out the pin for the black lead in pos. 8 and replace it with the pin for the blue/white lead from pos. 6 in the adapter cable connector.
- b Place a piece of shrink-tubing over the red lead on the adapter cable and solder together the red lead from the telephone's handsfree kit with the red lead in pos. 1 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
- c Place a piece of shrink-tubing over the black lead on the adapter cable and solder together the black lead from the telephone's handsfree kit with the black lead in pos. 4 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.
- d Place a piece of shrink-tubing over the yellow lead on the adapter cable and solder the Mute cable to the yellow lead in pos. 5 on the adapter cable. Slide the shrink-tubing over the soldered joint and heat it.

e Microphone:

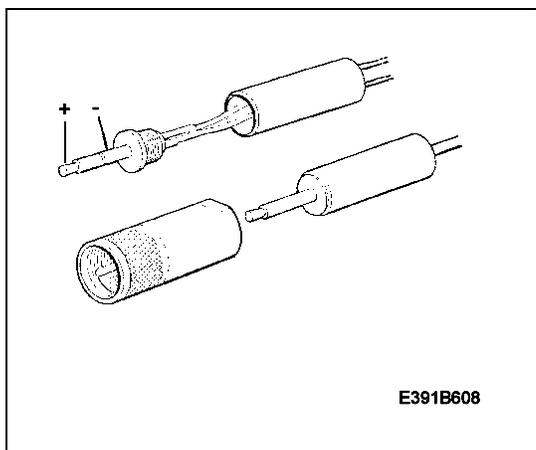

Use an ohmmeter to determine which of the terminals is the (+) and (-) of the jack plug.  
Solder the brown/grey lead in pos. 10 on the adapter cable to the (+) terminal on the jack plug.  
Solder the green lead in pos. 3 on the adapter cable to the (-) terminal on the jack plug.

f Loudspeaker:

Use an ohmmeter to determine which of the terminals is the (+) and (-) of the jack plug.  
Solder the grey/white lead in pos. 7 on the adapter cable to the (+) terminal on the jack plug.  
Solder the blue/white lead in pos. 8 on the adapter cable to the (-) terminal on the jack plug.

g Connect the microphone and loudspeaker jack plugs to the telephone's handsfree module.

h Connect the antenna cable with the adapter to the antenna cable on the telephone's handsfree kit.


i Make sure the microphone connection in the 10-pin connector has a screened lead (pos. 10 and pos. 3) in the car's pre-wired harness.

**If there is no screened lead**, continue with SI 391-1872 and then steps 8 and 9 in installation instructions 49 42 017.

**If there is a screened lead**, continue with steps 8 and 9 in installation instructions 49 42 017.

3 Then fit the telephone console as described in installation instructions 48 08 101.

**Glass-mounted GSM 900/1800 antenna**

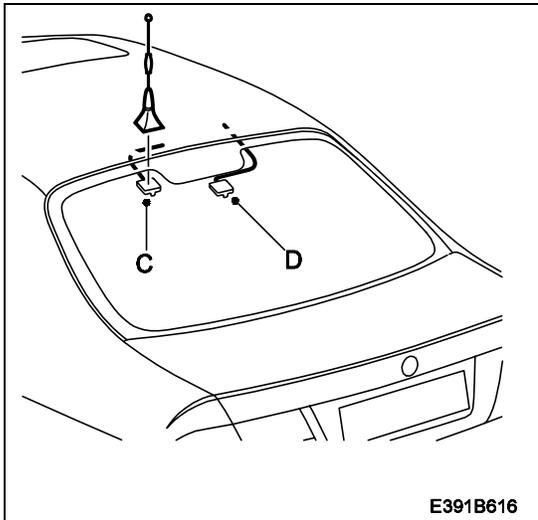


The best location for the antenna is described in installation instructions 47 12 303 included with kit 400 106 712. Cable laying will be simple and the antenna will not be visible in the rear-view mirror.

If an alternative location is used, the following may arise:

- The antenna may conceal some of the brake light.
- The antenna may decrease rear visibility.
- The antenna may impair radio reception.

The location of the antenna should be discussed with the customer prior to installation. The points above can then be used as a basis for the customer's decision.

The illustration show's the location of the AM and FM antennas, as well as the optimal and alternative locations for the antenna.

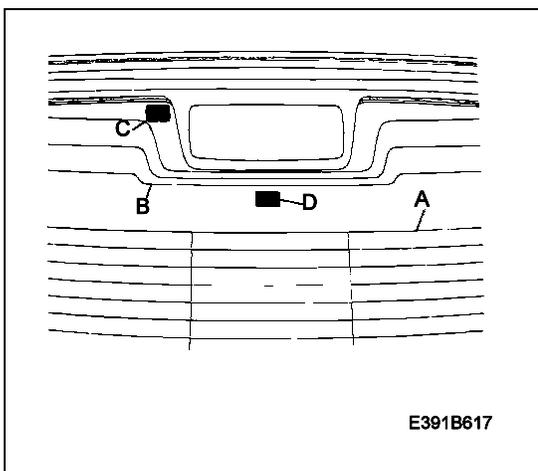

A FM antenna

B AM antenna

C Location according to installation instructions

D Alternative location

The adhesive used for glass-mounting has a service life of 3 years.