

## SERVICE INSTRUCTION


**Number:** 987-1858

**Year:** 1997

**Month:** NOVEMBER

**Market:** ALL

### Parking heater

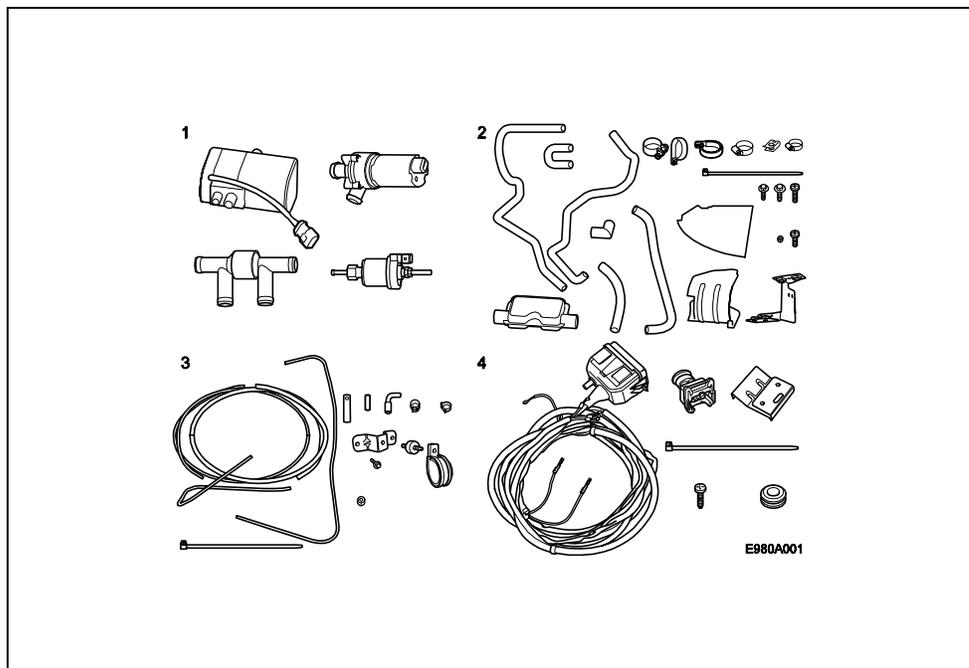

#### Cars affected

Saab 9-5 to be fitted with parking heater as an accessory.

#### Background

This Service Information is a supplement to the Installation Instructions, Parking heater 9-5, June 97 (art. no. 47 29 653). The Service Information concerns the modification of parts included in the kit marked 2 in the illustration.

The Eberspächer diagnostic unit is recommended for fault diagnosis of the heater. The Eberspächer manual for fault diagnosis is also recommended, until the Service Manual from Saab Automobile AB is available (preliminarily January 1998).

To order the manual, contact your local representative for Eberspächer. See the address list in Service Information.

#### Parts required

(10) 79 78 091 Screw with washer (2 pcs)

(16) 86 12 350 Diagnosis unit with adapter cable

25 1926 95 09 92 Eberspächer fault diagnosis manual (Swedish/German) (order from Eberspächer; see the address list in Service Information)

25 1926 95 10 33 Eberspächer fault diagnosis manual (English/French) (order from Eberspächer; see the address list in Service Information)

### Procedure

The procedure is divided into Preparations and Installation. Preparations must be performed before installing the heater as directed in the Installation Instructions 47 29 653. Installation describes any differences from the Installation Instructions, i.e. the steps that have been changed.




**WARNING**

Read the safety regulations in the Installation Instructions before commencing work.


### Preparations

- 1 Drill 2 holes in the parking heater holder as shown in the illustration.

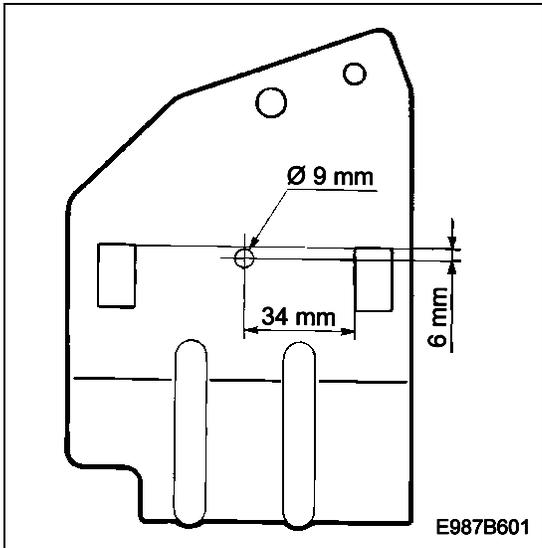


- 2 File the holes and remove any filings and flakes of paint. Clean with Teroson FL cleaner. Apply Standox 1K Füllprimer. Apply a top coat.

3 Mark out and remove the corner of the splash guard as shown in the illustration.

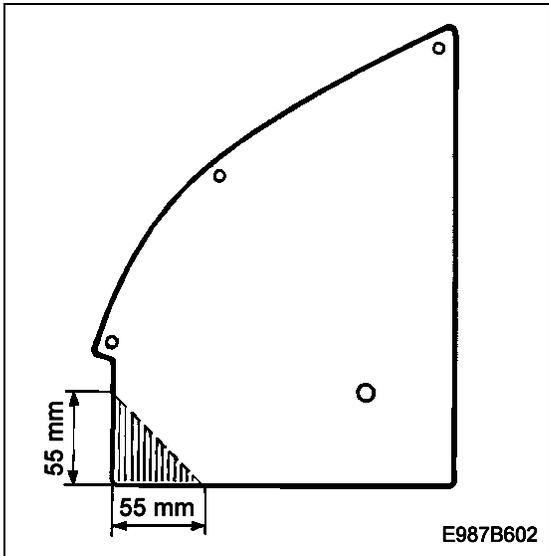


### Installation

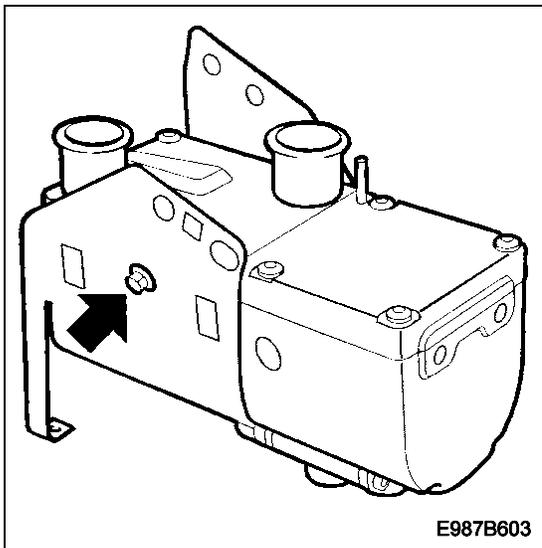

Point 18


Position the heater in the holder so that the catches engage securely. Insert the two screws.

Point 28

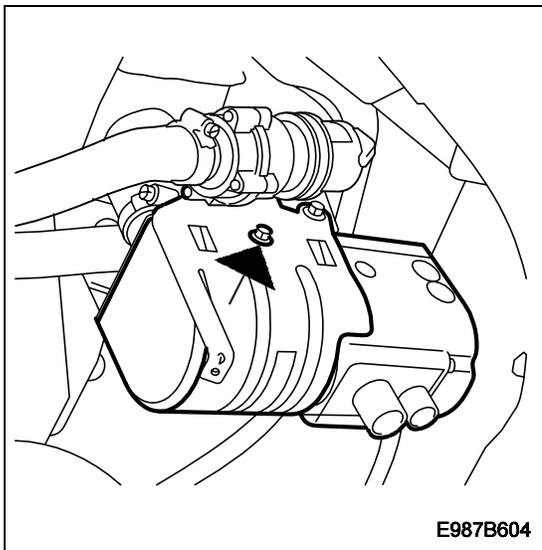

Suspend the holder with heater from the hook at the front of the bracket and screw the heater in place. Tighten the two screws that secure the heater in the holder.

Point 71

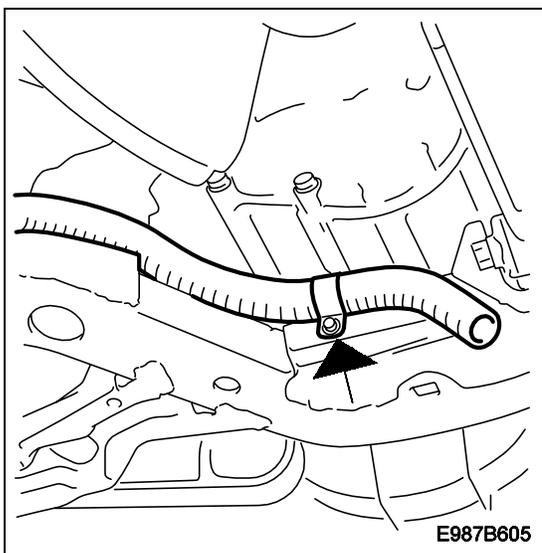

Remove the rubber protection from the clip that holds the exhaust hose of the heater to the subframe. (The clamp is included in the kit and is marked as size 24.)

Fit the clip to the exhaust hose and bend the hose over the subframe (see the illustration in the Installation Instructions) so that it cannot come into contact with the front wheel or subframe.

**Addresses to Eberspächer importers**

**Belgium**

EBERSPÄCHER bvba  
Brixtonlaan 27  
B-1930 Zaventem

Tel. (02) 7 20 97 35

**Denmark**

Robert Bosch A/S  
Autoudstyr  
Telegrafvej 1  
DK-2750 Ballerup  
Tel. (44) 89 83 10

**Finland**

Wihuri Oy AUTOLA  
Manttaalitie 9  
FIN-01530 Vantaa 51  
Tel. (09) 82 58 51

**France**

S.N.C. Eberspächer  
8, Rue Proudhon BP 105  
F-93214 La Plaine St. Denis CDX  
Tel. (01) 49 17 52 00

**Italy**

OFIRA Italiana Spa.  
Via Eritrea 20 F  
I-25126 Brescia  
Tel. (030) 3 79 31

**Luxenburg**

EBERSPÄCHER bvba-sprl  
Brixtonlaan 27  
B-1930 Zaventem  
Tel. (02) 7 20 97 35

**Netherlands**

Eberca BV  
Postbus 1594  
B. Franklinstraat 10  
3260 BB Oud-Beijerland  
3261 LW Oud-Beijerland  
Tel. (0186) 62 19 55

**Norway**

Robert Bosch Norge A/S  
Trollåsveien 8  
N-1414 Trollåsen  
Tel. (668) 1 70 00

**Switzerland**

Fricker Autotechnik AG  
Mühlemattstr. 48  
CH-4104 Oberwil/BL  
Tel. (061) 4 01 23 23

**Great Britain**

Eberspacher (UK) Ltd.  
Unit 10, Headlands Business Park  
Salisbury Road, Ringwood  
GB-Hampshire BH 243 PB  
Tel. (1425) 48 01 51

**Sweden**

Svenska Eberspacher AB  
Flygfältsgatan 10  
S-128 30 Skarpnäck  
Tel. (08) 724 02 20

**Germany**

Eberspacher Heizgeräte GmbH  
Wilhelmstraße 47  
D-17358 Torgelow  
Tel. (03976) 23 50-0

**Austria**

Eberspacher Ges.m.b.H.  
Richard-Strauss-Str. 4  
A-1232 Wien  
Tel. (01) 6 16 16 46-0